



# AFS Installation Instructions

1

Apply pipe dope or Teflon tape to the appropriate thread for your Spray Booms. (1/4 x 1/4 hex nipple shown in Figure 1). Tighten on spray boom. (Figure 1-B)

Apply pipe dope here



Figure 1

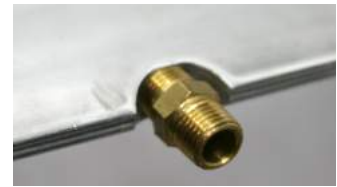


Figure 1-B

2

Screw check valve onto appropriate thread (1/4 inch NPT thread nipple shown in Figure 2)



Figure 2

**DO NOT USE PIPE DOPE OR TEFLON TAPE.**

3

Turn the check valve by hand until the check valve gets snug then use a 7/8 inch wrench to tighten approximately one more turn. Be sure to tighten so the leg of the check valve is pointed down towards the ground. (As seen on Figure 3)



Figure 3

**CAUTION DO NOT OVER TIGHTEN.**

4

Install the nozzle and position the spray tip at the proper angle.

As seen on (Figure 4)



Figure 4

For more information call  
1-800-833-2013